

Panel Antenna Installation Guide

Please Ensure, SAFETY AT ALL TIMES








DO NOT INSTALL NEAR POWER LINES, TELEPHONE LINES AND GUY WIRES. THEY ALL LOOK THE SAME SO ASSUME ANY WIRE OR LINE CAN ELECTROCUTE YOU.


Disconnect all power to transmitters related to the installation.

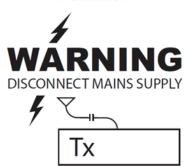







Tools and equipment that may be required:

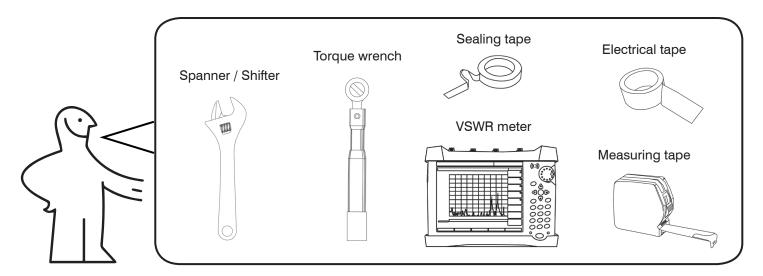


Any **QUESTIONS** contact your RFI representaive.

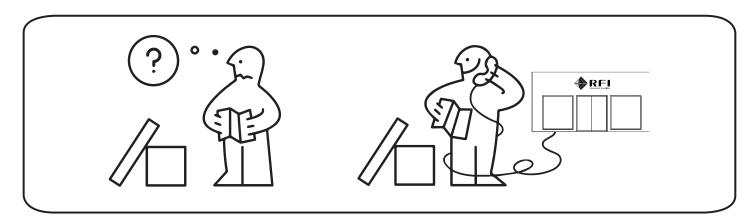

1. Open crate and **inspect** antenna for transport damage before removing from crate.

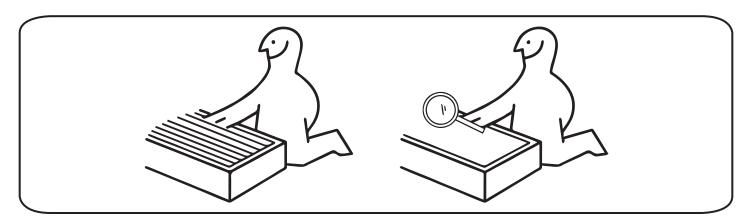





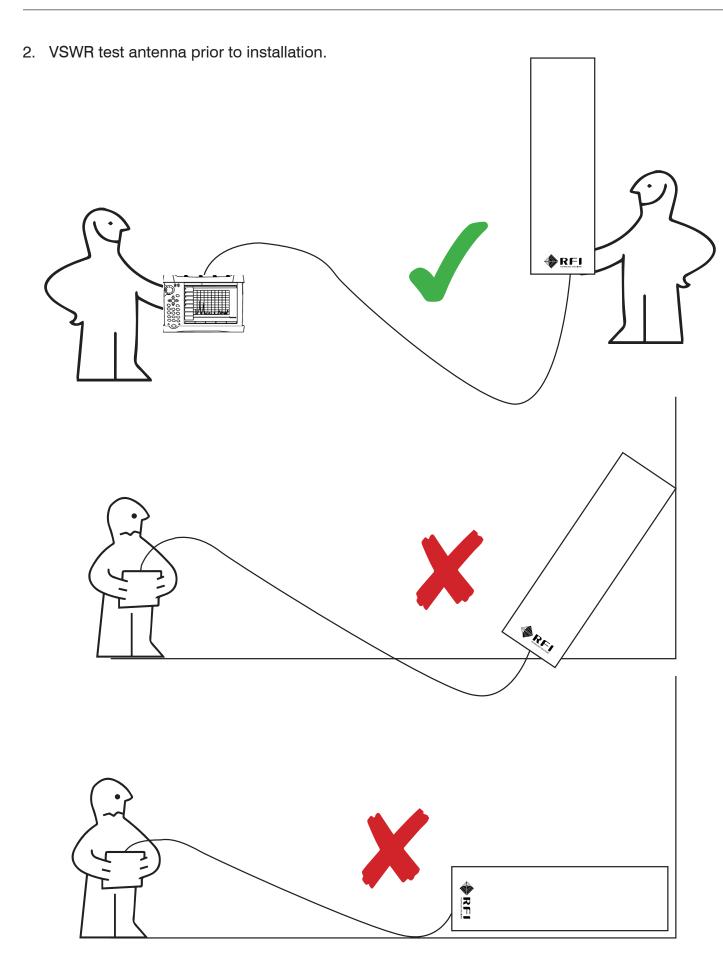



3. Mount antenna vertically, ensure antenna Connector is facing downward.

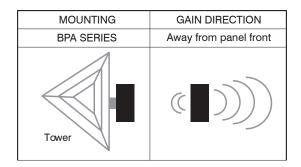

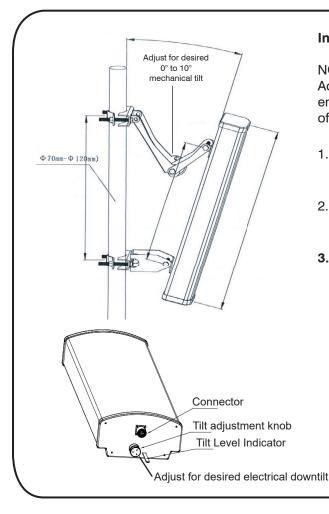

Installation Steps:

NOTE: Panel antennas with MET (Manual Electrical Tilt)
Adjustment are set to a default of MAXIMUM electrical tilt. Please ensure the tilt adjustment knob is rotated until the required level of electrical tilt is achieved BEFORE installation.

- 1. Before installating the antenna, the installation brackets/ clmap assemblies should be attached to the antenna. Torque these bolts to 13.2 lbs.ft (18Nm).
- 2. Install the antenna to the pole or mast using the supplied clamp/bolt assemblies. Torque the clamp bolts to 18.5 lbs.ft (24Nm).


3. Tilt Adjustment Mechanical Adjustment

Adjust the downtilt bracket to achieve the desired antenna downtilt angle. When completed, torque the downtilt bracket hinge bolt to 18.5 lbs.ft (25Nm).

Electrical Adjustment (MET)


To adjust the electrical tilt, rotate the tilt adjustment knob until the required tilt level can be read on the tilt level indicator. Both the adjustment knob and the tilt level indicator can be found on the bottom of the panel. This is recommended before installation.

4. VSWR test the antenna after mounting.

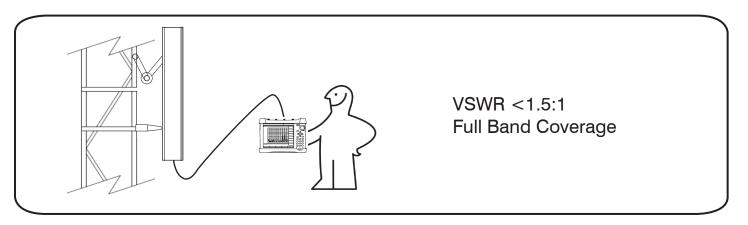



5. Torque connector(s) and weatherproof. Drain loop must be applied.

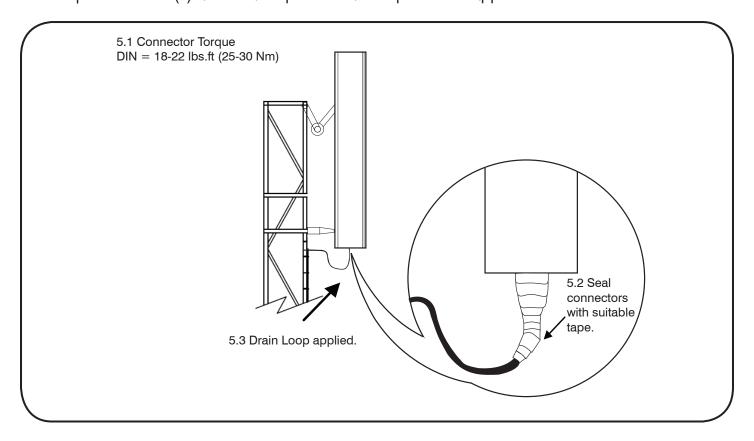

6. Take installation photos and store with VSWR results with site records.

